 


MILEXUS

TWIN TUB WASHING MACHINE

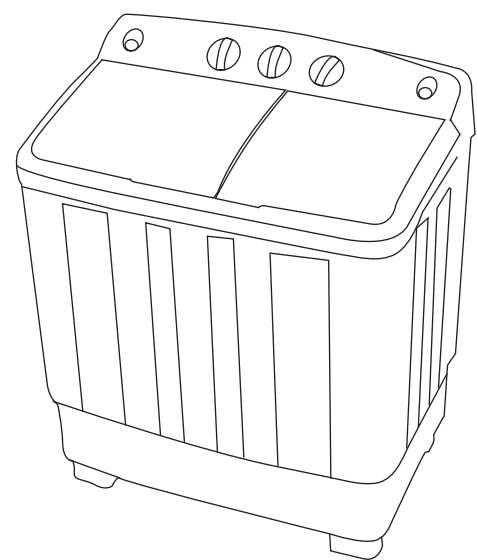


ML-WM-7kg

INSTRUCTION MANUAL

MADE IN CHINA


RINSE TYPES OF RINSE

OVERFLOW RINSE

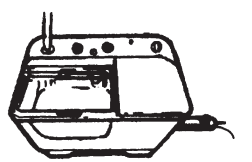

1. Turn the water feed selector and the drain valve to "Wash".
2. Turn on the water tap, pour water to the level. Set wash timer to 7 minutes for rinsing.
3. Remove the clothes from the spin tub to the wash-tub.
4. If water becomes clear in overflow rinsing Set the wash timer at "Off" and close the tap.
5. Turn the drain valve onto "Drain" set clothes to spin tub for last spin.

REGULAR RINSE

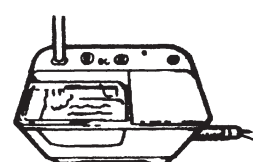

1. Turn the water feed selector and the drain valve onto "wash".
 2. Turn on the water tap, pour water to the level. Set wash timer to 2-3 minutes for rinsing.
 3. Move the clothes to the spin tub for spin. Drain the water out.
 4. Remove the clothes from the spin tub to the wash-tub.
 5. Repeat 1 ~ 4 step for 2 ~ 3 times.
- Note: water may splash in overflow rinsing. Please close the wash lid.

METHOD OF WASHING BLANKET

Wash Method

1. Supply water to "Low" level. Pour the detergent and dissolve it for 1 min
 2. Supply water to "High" level and insert the blanket.
 3. Select "Soft" mode.
 4. Remove the blanket to spin tub.
- Note:
1. Please close the wash lid at washing
 2. Must be sure to add the spin cover.


- Guide for washing blanket.
1. Check if woolen blanket has wash mark on label.
 2. You can only wash a single blanket made of synthetic fabric weight less than 2kg
- Note: Never wash pure wool or electric blanket.



5


AFTER WASHING

1. Pull out the plug from socket.
 2. Hang the drain hose on the hose hook when the water in the hose has been drained.
- Note: Clean the wash and spin tubs with water after using bleach.

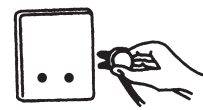


CLEANING THE WASHING MACHINE

1. Please clean the washer with neutral detergent and a wet cotton.
- Do not use other chemicals to clean the washer.

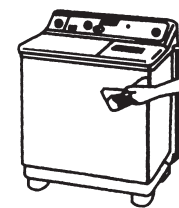

THE INSTALLATION OF THE DRAIN HOSE

1. The height of drain hose should be less than 15 cm.
2. Don't put the hose in water.
3. The hose can be extended to 1 meters on the smooth ground.

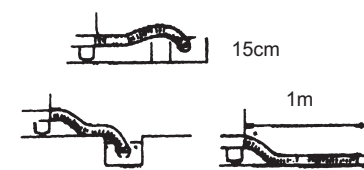


GUIDE FOR DETERGENT

wash powder for easy dissolution
Supply water to "Low" level, pour in wash powder. Dissolve for 1-2 minutes. Then add the clothes and water, and start washing.


About Softener
1. Please use the softener in the wash tub.
2. Using of the softener, please consult with the operation of softener.

6

CAUTIONS

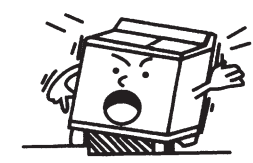


Install washer on plain ground.

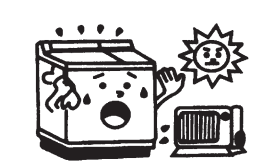

Keep away from fire, heat and sunlight.




Do not install outdoor. It can cause electrical shock.

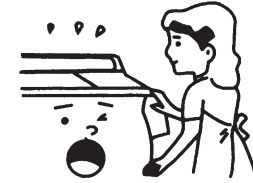


Do not pour hot water (over 55°C) in the wash tub.




Do not sprinkle chemical such as insecticide on the washing machine.

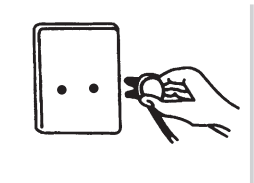

After operation, pull out the plug from socket.

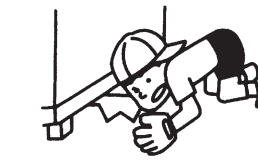

Do not put your hand under the washing machine when in use.

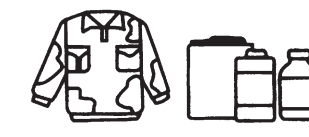

Do not use chemical solvent to wash clothes, it causes fire.

Children should not play with the appliances.


Be Sure To Earth For Safety

1. Please contact electrician for installing earth wire.
 2. Do not connect earth wire to the following.
- Gas pipe
 - Telephone wire
 - Lighting rod
 - Water pipe

7

CHANGING THE LINT FILTER

If the lint filter is broken, you may replace it with a nylon stocking.
1. Clip 18 cm length from the stocking, and tie a knot.
2. Take off the broken filter, set the stocking between frame ⑧ and ⑨

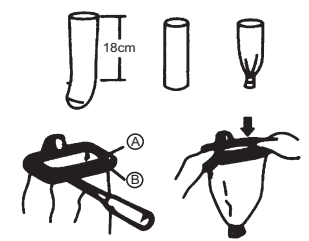

CHECK THE FOLLOWING

1. When the washing machine stops working:
 - Is the cord firmly in?
 - Is the pulsator caught up by something?
2. When the washing machine stops spinning:
 - Is the spinning tub axle free?
 - Is the outlet of the spinning tub blocked by clothes?
3. When the spin tub does not work:
 - pull down the water drain hose?
 - Is the outlet of the drain hose submerged in the water?
 - Is the outlet of the washer drain hose too high?

SPECIFICATIONS


Model No.:	ML-WM-7kg
Capacity:	Wash: 7.0Kg Spin: 5.0Kg
Input Power:	Wash: 400W Spin: 160W
N. W/G. W:	19/21Kg
Size: (L x W x H)	803 x 460 x 895mm

0.03MPa-0.85MPa


8

CHARACTERISTIC


wash & spin can be operated at the same time
clothes can be rinsed in spin tub.
Saves time, water and energy.

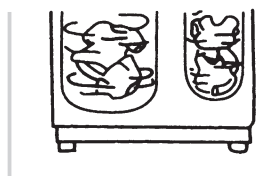


The special and big pulsator
Twelve new water current for washing
Washing clothes won't twist.

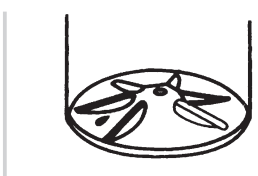

CAUTION FOR SAFETY

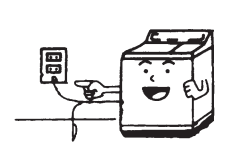

Be sure to connect the 'EARTH' wire.

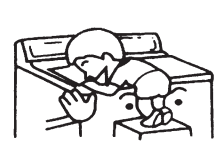

Do not allow the children to touch the wash tub.



Do not splash water on the operation panel.



Don't touch the turning spin tub.




place spin cover in position before starting the spin operation.



switch off the power wire in case of unusual voltage fluctuation.

The running spin tub will stop when open the spin cover.

1

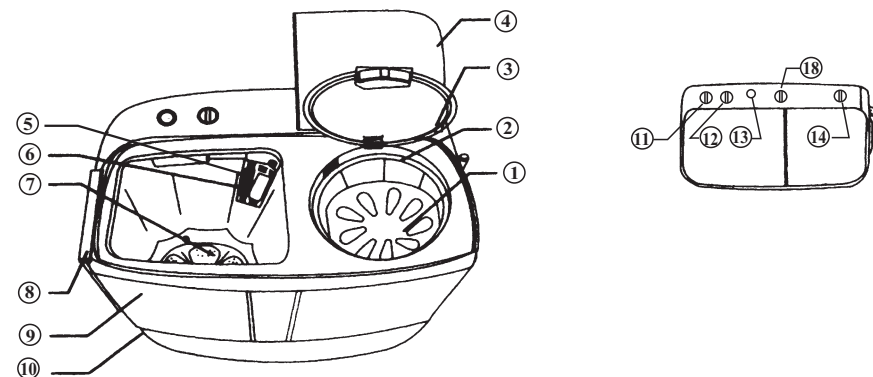

- 1 safety cover
- 2 spin-dry tub
- 3 spin-dry inner cover
- 4 spin-dry cover
- 5 water level adjustor
- 6 filter
- 7 twist wheel
- 8 wash cover
- 9 cabinet
- 10 base

- 11 wash timer switch
- 12 water discharge exchange switch
- 13 water inlet
- 14 spin-dry timer switch
- 15 discharge tube
- 16 power wire
- 17 rear plate
- 18 drain switch

2

CHARACTERISTIC

WASH TIMER
Select washing time according to type of clothes.

WASH SELECTOR
Select the means of washing.

DRAIN VALVE
Turn the knob to drain when required.

Water inlet

SPIN TIMER
Adjust the timer from 1 ~ 5 minutes according to the quantity of clothes.

CAUTIONS FOR SAFETY




The spin cover



Water hose

3

OPERATION FOR WASHING PREPARATION WASHING

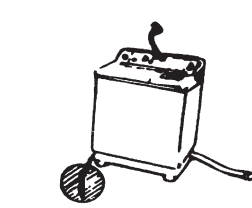


1. Check the ground wire.
2. Fix the water hose to the joint.
3. Put down the drain hose and take off the hose stopper.
4. Insert the plug in the socket.

Intermediate Spin

It can save the rinse time and water

1. Put the washed clothes in the spin tub evenly, fix the spin cover.
 2. Set the spin timer at 3 minute mark
- Note: In case of unusual noise, adjust the clothes evenly and then start spinning operation.

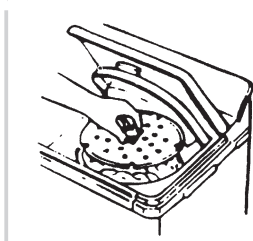

CAUTION BEFORE WASH

1. Remove every thing from pockets.
 2. Sort clothes by fabric, colour etc.
 3. Close all zippers etc before washing.
- Place woolen, silk clothes in a net before putting in for washing.



4