 
 


INSTRUCTION

MANUAL

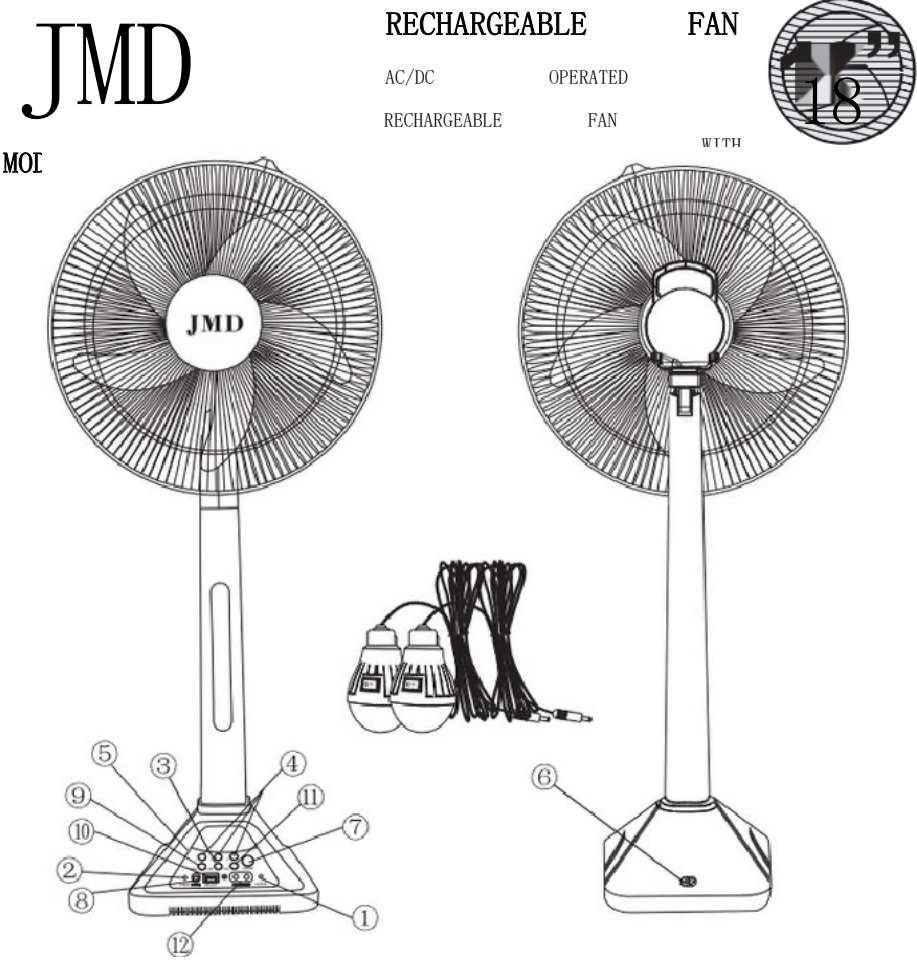

- 1.Handle
- 2.Back cover
- 3.Fixed ring of grill
- 4.Fan blade
- 5.Fixed knob of blade
- 6.Big fixed ring
- 7.Front cover
- 8.Protecting cover
- 9.Battery
- 10.Battery cover

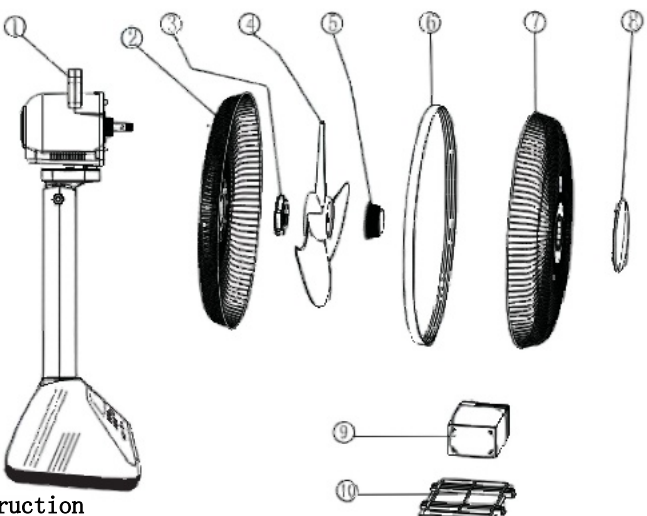 


ATTENTION

- 1.Please read this instruction before first use.
- 2.Please ensure that the voltage indicated on the appliance corresponds with the mains voltage.
- 3.When the led gets dim,please recharge the product.
- 4.Charge at least once in every 3 months for 8hours even when the appliance is not in use.
- 5.Please keep the fan switch in OFF status when not in use.
- 6.Suitable operating ambient humidity level is 0℃-40℃.
- 7.Avoid using in water or moist.

HOW TO OPERATE

- 1.Make sure the power supply is consisten
- 2.Connect the power supply,the charge indicat

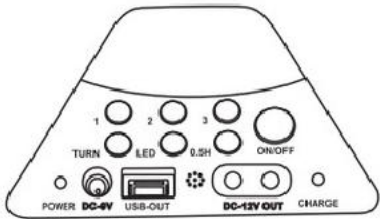

FUNCTION

Power:Turn on or turn off the fan

1-3 speed choose

0.5H:0.5hours timer

LED:Turn on or turn off LED light

Oscillation control lock

HOW TO ASSEMBLE THE FAN

- 1.Connect the battery line;please see “HOW TO CHANGE THE BATTERY” for reference.
- 2.Fix all parts as shown in picture 2,but knob of blade must be fixed anti clockwise.
- 3.As shown in picture 3,fan is complete.

- 1.Red LED charging indicator
- 2.Green LED operating indicator
- 3.LED switch
- 4.Stepless speed switch
- 5.Transparent cover
- 6.AC plug socket
- 7.Fan switch
- 8.DC socket
- 9.Oscillation control lock
- 10.USB socket
- 11.Time switch
- 12.DC Output for LED BULBS

 
Thank you for using our product,please read the instruction manual carefullybefore initial use.

Please read these instructions before first use:

140 mm

正面

140mm

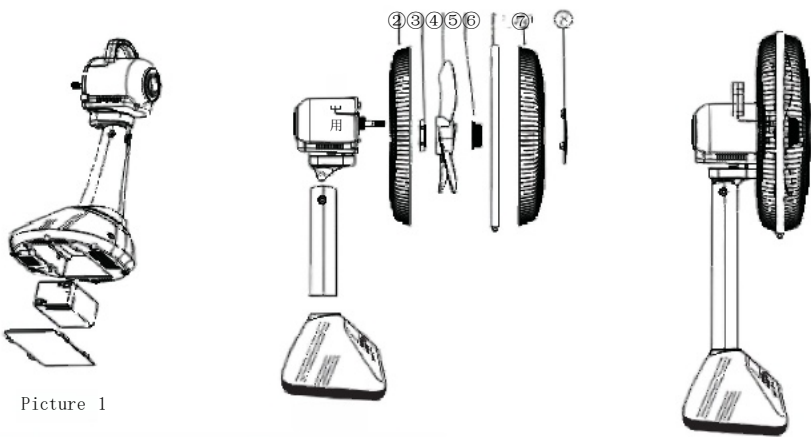

Picture 1

- 1.Loosen the fixing screw on the battery cover.
- 2.Take out the battery cover.
- 3.Pull out the battery terminal and take out old battery.
- 4.Put inside the new battery,and connect'田'to red cord,●to black cord,must follow it.
- 5.Put the cover and tighten the screw.



HOW TO CHARGE THE FAN

- 1.Please ensure that the voltage indicated on the appliance corresponds with the mains voltage.
- 2.Plug in the cord to AC socket.
- 3.Red indicator shows that the battery is getting charged.
- 4.It is a normal phenomenon of slight heat while charging the battery.

TECHNICAL	DATA
1.Power	source:110-240V 50/60Hz
2.Battery:12V	4.5Ah sealed lead-acid rechargeable battery
3.Light	source:20pcs 0.5W LED
4.Blade:18inch	
5.Charge	time:12-15 hours
6.Duration:50	hours/10LED;30 hours/20LED
	Fan:3-8hours/3speed

- WARNING:1.The product should not be abandoned in life waste.The battery especially should be recycled after abandoning,as it is environmentally harmful.
- 2.If the supply cord of the fas is damaged,it shall be exclusively replaced by the manufacturer or his service agent or a similar quaified person in order to avoid a hazard.
- 3.This appliance is not intended for use by person(including children)with reduced physical,sensory or mental capabilities,or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for the safety.
- 4.Children should be supervised to ensure that they do not play with the appliance.

背面